ASSEMBLING INSTRUCTIONS

CRAFTSMAN
WORK BENCH

MODEL NUMBER 704.2170

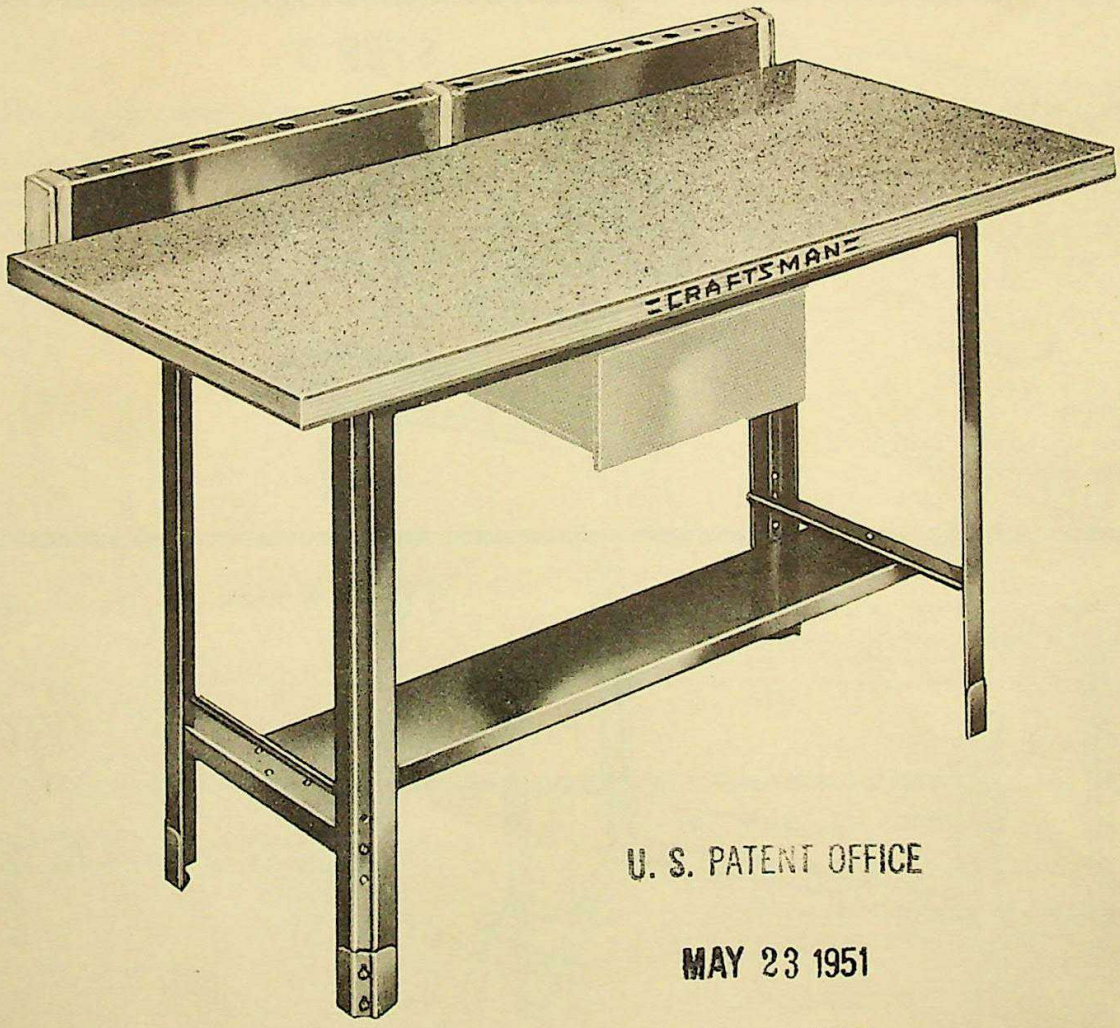

U. S. PATENT OFFICE

MAY 23 1951

DIVISION 52

SEARS, ROEBUCK and CO.

Printed in U.S.A.

ASSEMBLE WORK BENCH FOLLOW INSTRUCTIONS CAREFULLY

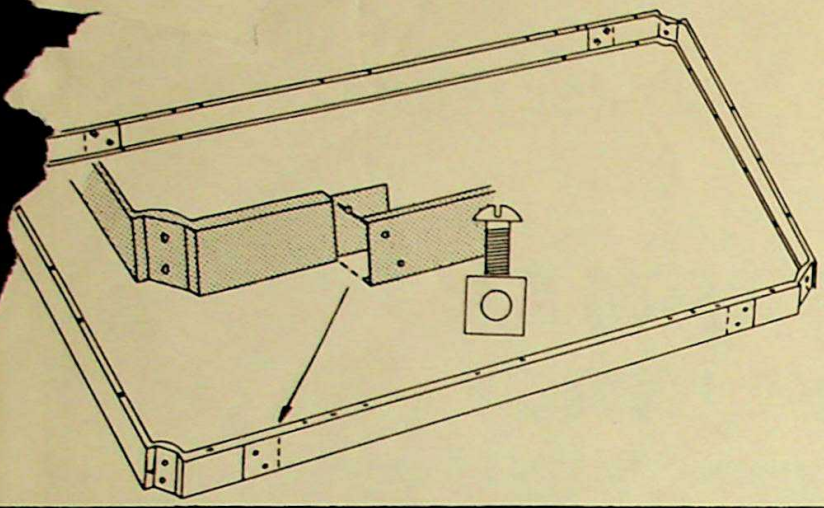

STEP 1

Assemble Frame (WB 101 2 ea.; WB 102 2 ea.)
as illustrated, using eight bolts and nuts
(SB 301)

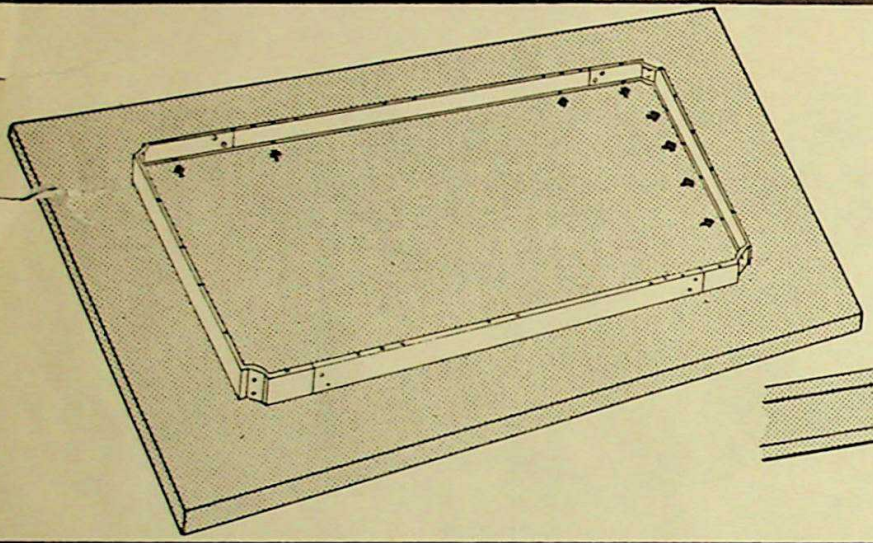

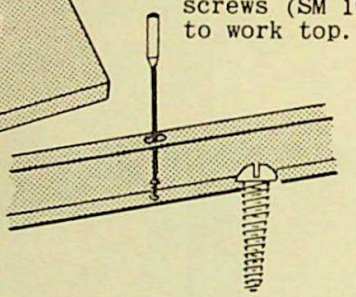

STEP 2

Place wood work top (WB 100) on flat surfac
side with "tapped" holes facing up. Key
round holes in assembled support frame to
"tapped" holes in work top. Using wood
screws (SM 101), as illustrated, secure fra
to work top.

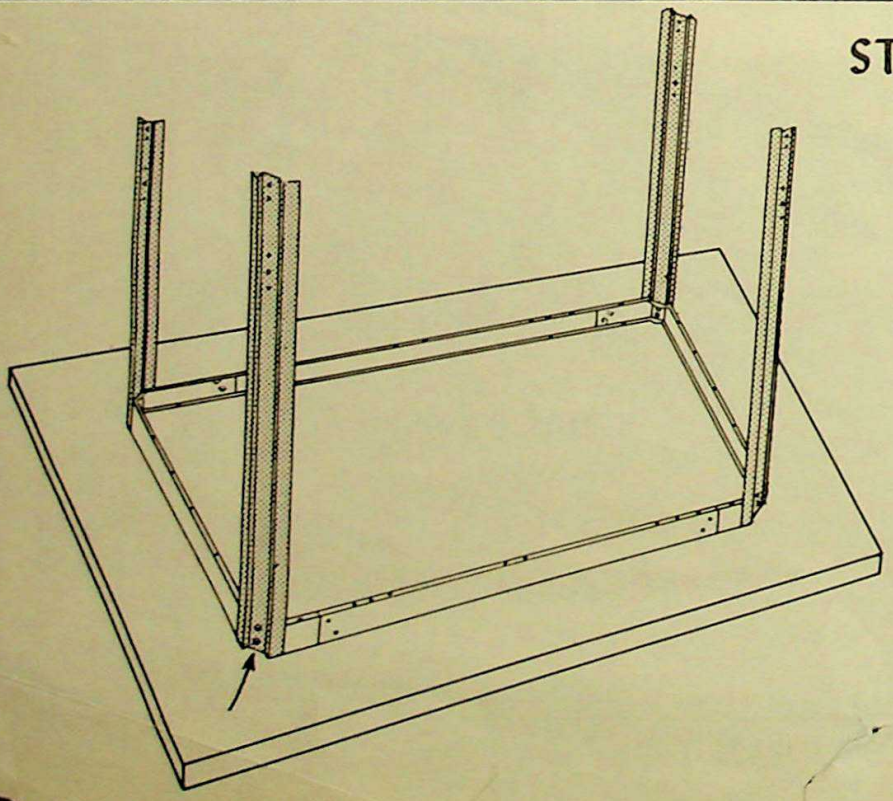

STEP 3

Attach legs to corners of support frame
securely using eight bolts and nuts (SB 401

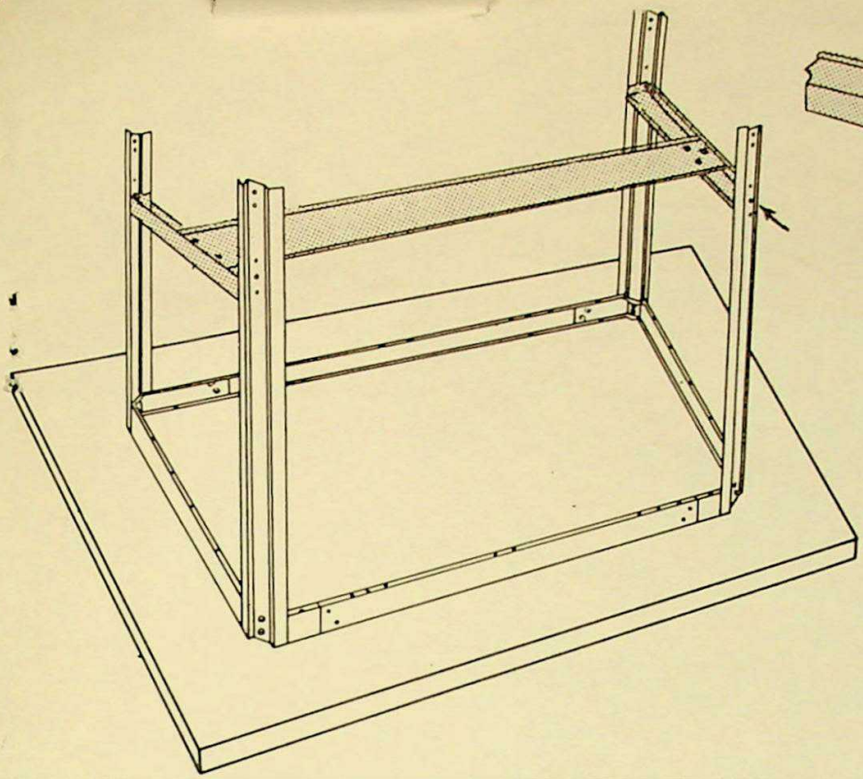

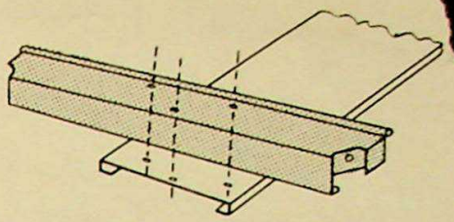

STEP 4

Assemble shelf (WB 301) to shelf support brackets (WB 302) using six bolts and nuts (SB 301). Now attach shelf assembly (using bolts and nuts No. SB 401) to legs at desired center leg holes.

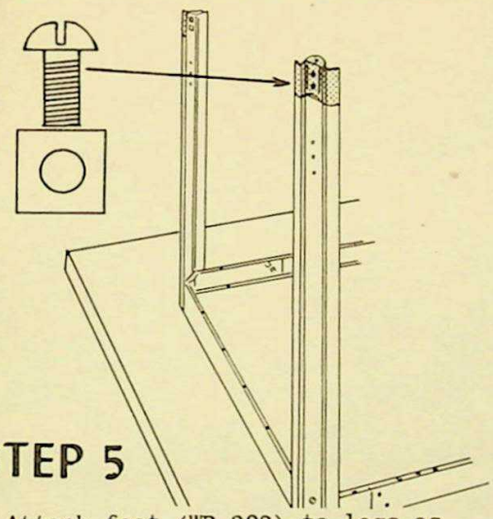

STEP 5

Attach feet (WB 202) to legs as illustrated using eight bolts and nuts (SB401). Note slotted holes in feet provided for correcting variations in floor level.

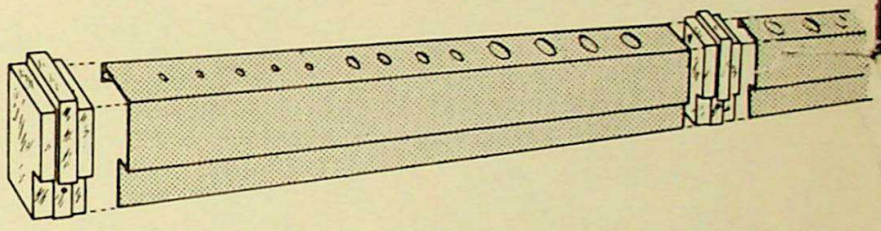

STEP 6

Assemble wood blocks (WB 107) to steel tool holder (WB 106) as illustrated. No screws or bolts necessary for the above assembly. NOW, using wood screws (WS 201) attach tool holder assembly to work bench top at holes indicated by arrows as illustrated.

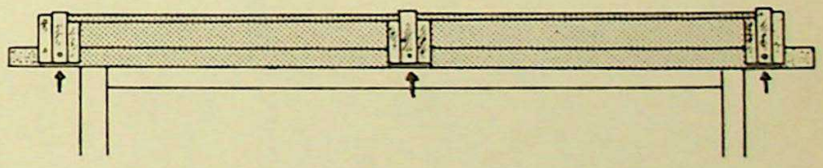

PARTS LIST

PART NAME	PART NO	QUANTITY PER BENCH
Work Top	WB-100	1**
Ends of Top Support Frame	WB-101	2
Channels Top Support Frame	WB-102	2
Legs	WB-201	4
Feet	WB-202	4
Shelf	WB-301	1
Shelf Support Bracket	WB-302	2
Tool Holder	WB-106	2
Tool Holder Support Blocks	WB-107	3
Bolts, Nuts & Screws	All in Cloth Bag	

** Packaged Separately in Corrugated Wrapper - 61" x 29" x 2"

BOLTS, NUTS AND SCREWS

DESCRIPTION	PART NO.	QUANTITY PER BENCH	TO BE USED TO	QUANTITY
#10x7/8" RH Wood Screws	SM-101	16	Secure Top Frame To Work Top	16
#10x2" FH Wood Screws	WS-201	3	Secure Tool Holder Support Blocks to Top	3
3/16x3/8 O.H. Bolts & Sq. Nuts	SB-301	14	To Assemble Top Support Frame	8
			To Attach Shelf to Shelf Support Bracket	6
1/4x3/4 RH Bolts & Sq. Nuts	SB-401	20	To Attach Legs to Frame	8
			To Attach Legs to Shelf Assembly	
			To Attach Feet to Legs	

IMPORTANT

TO ATTACH CRAFTSMAN WORK BENCH DRAWER, MODEL NO. 2171, SEE DRAWER INSTRUCTION SHEET

ASSEMBLING INSTRUCTIONS

CRAFTSMAN
WORK BENCH DRAWER

MODEL NUMBER 704.2171

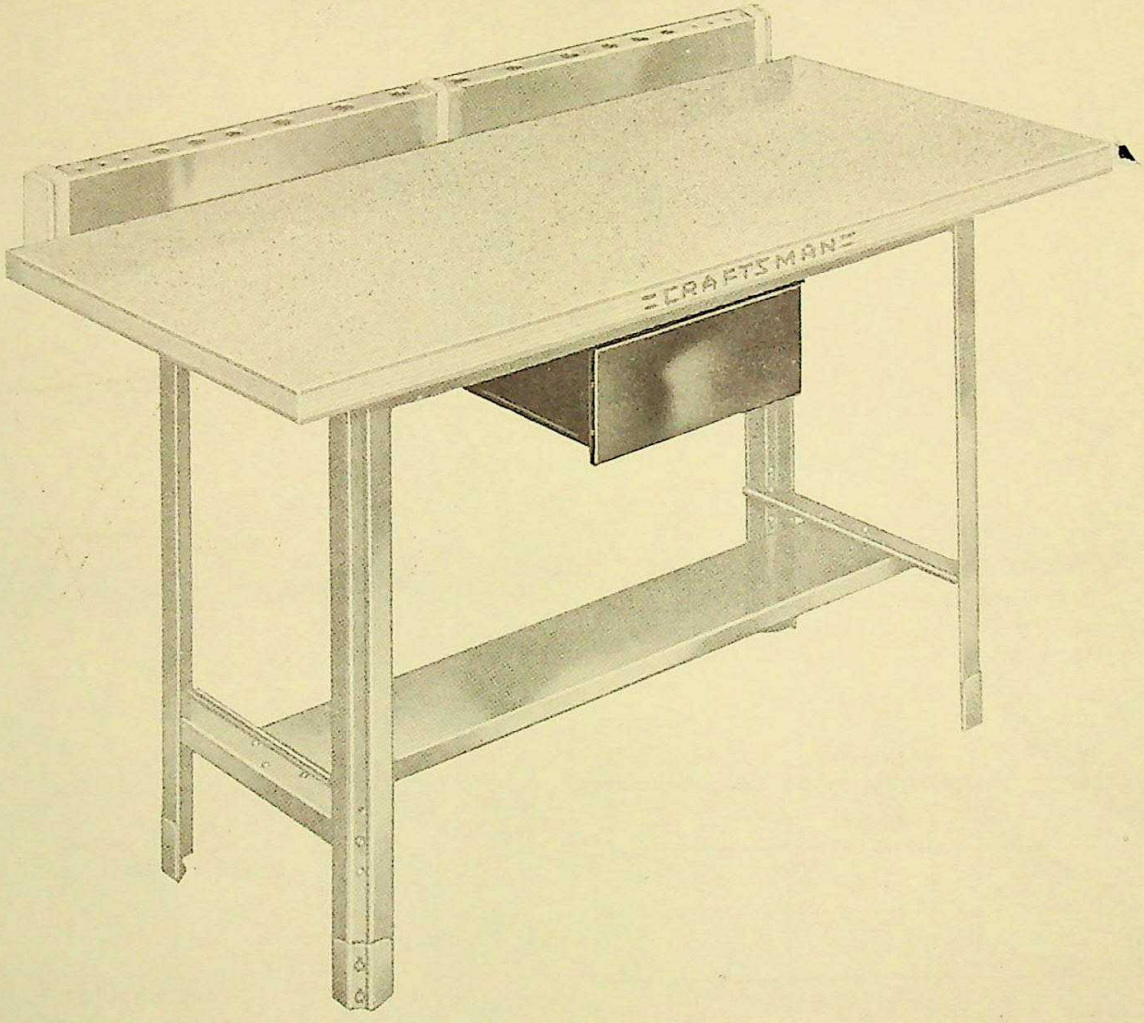

SEARS, ROEBUCK and CO.

Printed in U.S.A.

312
~~330~~
348.2

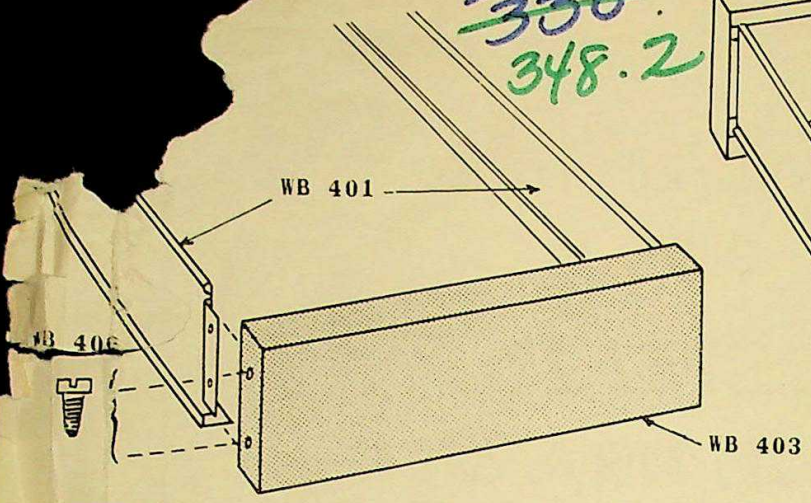

STEP NO 1. Attach Sides (WB 401) to Front (WB 403). Secure with Screws No. 406.

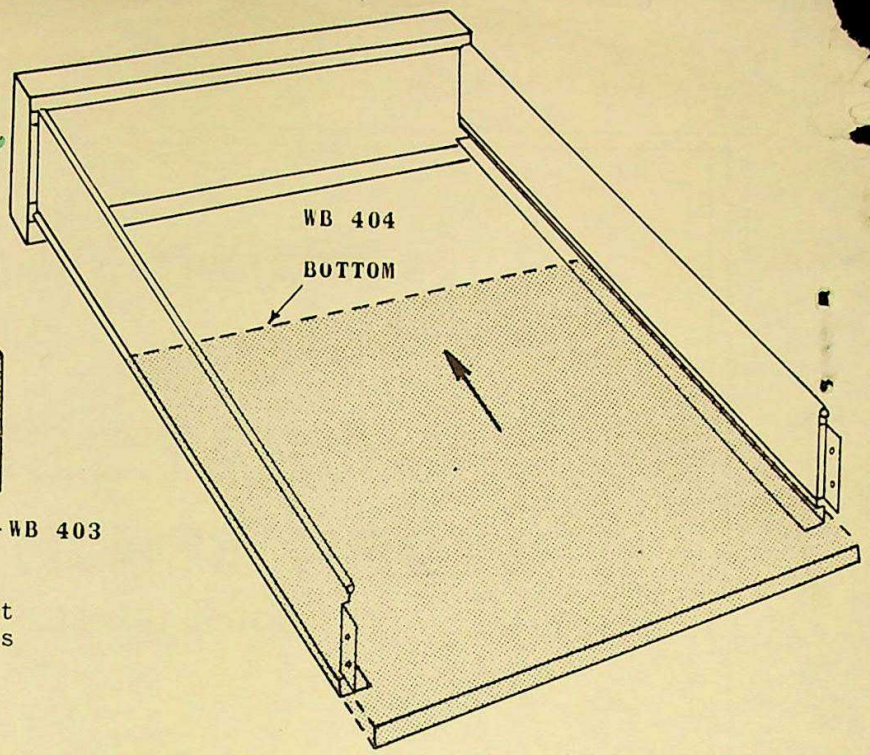

STEP NO. 2. Slide Bottom (WB 404) into Channel of Sides and Front.

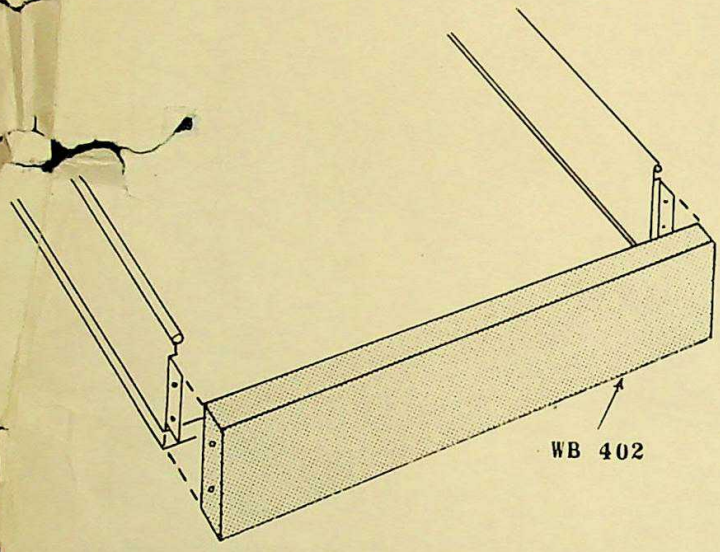

STEP NO. 3. Place Back (WB 402) over Side Ends and Bottom. Secure with Screws No. 406.

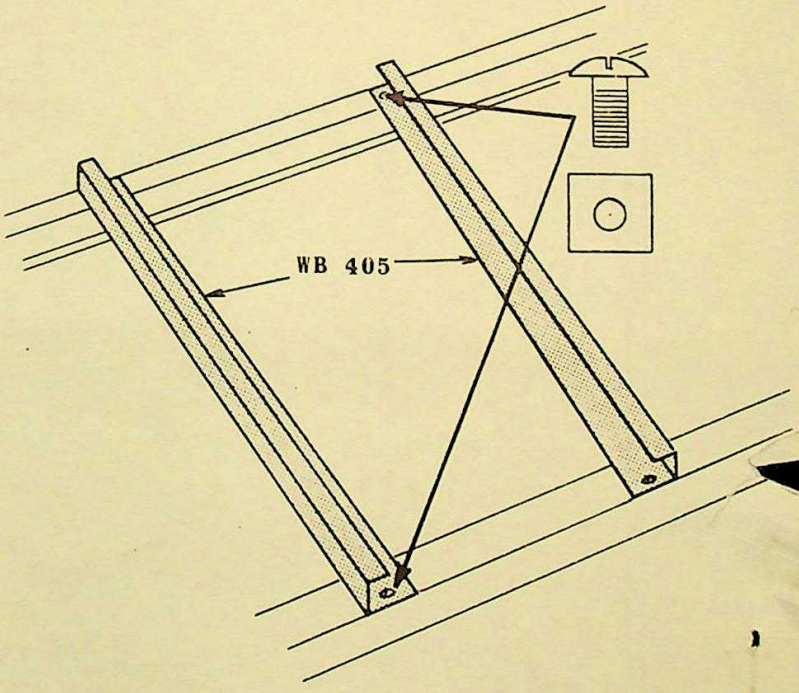

STEP NO. 4. Attach Slide Channel Guide (WB 405) to Holes in Flange of Work Bench Support Frame. Use Bolts and Nuts No. 407.

NOTE: Slotted Holes in Guide Channel are for adjustment of Drawer Slide.

Holes in Flange are Provided for Extra Drawer if desired.

312
348.2

PART NAME	PART NO.	QUANTITY
Drawer Side	WB 401	2
Drawer Back	WB 402	1
Drawer Front	WB 403	1
Drawer Bottom	WB 404	1
Drawer Channel Guide	WB 405	2
#4 Binder Head Sheet Metal Screws - 3/8" Long	WB 406	8
3/16"x3/8" O.H. Bolts with Sq. Nuts	WB 407	4